

Re: Serial Upper Filter Driver Help Required

Source:

<http://www.tech-archive.net/Archive/Development/microsoft.public.development.device.drivers/2004-09/1042.html>

From: Maxim S. Shatskih (maxim_at_storagecraft.com)

Date: 09/22/04

Date: Wed, 22 Sep 2004 04:04:31 +0400

> *Can you explain this further please? I had thought that my driver
> could be loaded and attached to the stack and then detached and
> unloaded again as long as nothing else has attached on top of it.*

No. You need to shutdown the stack to detach the driver.

--

Maxim Shatskih, Windows DDK MVP
StorageCraft Corporation
maxim@storagecraft.com
<http://www.storagecraft.com>