

Re: PPC keeps Proxy Required checked

Source: <http://www.tech-archive.net/Archive/PocketPC/microsoft.public.pocketpc/2007-03/msg00517.html>

- *From:* "Chris" <redster.net_nospam_@xxxxxxxxxxxxxxxxxxxx>
 - *Date:* Wed, 21 Mar 2007 16:59:44 -0000
-

Hi,

I'm having exactly the opposite problem and it's driving me nuts!

My proxy settings won't persist.

I'm trying to use my m3100 (HTC tytn type device) via wireless and usb activesync in the office. We have an ISA server and thus I've entered the proxy details including port 8080.

The wireless connects OK, but I cannot browse the web, every time I set the proxy settings they immediately revert back to no proxy.

I've tried using the 'my work network' settings and I've tried setting up a new one – both behave in the same way, I enter the proxy details, and as soon as I go back to view them, the boxes are unticked and the settings gone.

I've tried with the device connected to the PC and disconnected, soft and hard resets, and am now at a loss.

I've had pocketpc devices back to the cassiopeia and original ipaq and nothing's so far been this annoying.

I'd be grateful for any help anyone can offer as this is seriously hampering the usefulness of this little device and may indeed ultimately contribute to it's untimely demise!

Regards,

Chris.

<PeterNZ@xxxxxxxx> wrote in message
<news:1174337002.989588.212610@xx>

Hi,

I have a small problem which drives me nuts! I have a Dell Axim 30i and connect to the internet via DSL and a wireless connection. The DSL router is a D-Link DSL-G604T. I am using Windows Vista on my PC.

Re: PPC keeps Proxy Required checked

On the Pockect PC under Start – Settings – Connections – Connections – Advanced – Select Networks – Edit – Proxy Settings the Pockect PC keeps on setting the "This network uses a proxy server to connect to the Internet" and the ProxyServer is set to "nc3". If this is set, I obviously can't get anything from the Internet. So I delete the proxy server and uncheck the check box. It then works for a while until it stops working again (i.e in the middle of downloading my RSS feeds etc!). If I check the proxy settings, it is back to as it was before with the "nc3" setting!

I wonder where the proxy settings come from. Which application sets it? Does it come from the router (I checked the settings on the router again and again and can't find anything!)

So if anyone has any ideas, I would very much appreciate if you would post it here.

Thanks in advance!

Cheers

Peter