

## Re: Shift and Control Key's stick

**Source:**

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.general/2004-05/21369.html>

---

**From:** Steve Nielsen (*steve\_nielsen\_at\_nospam.nowhere.net*)

**Date:** 05/21/04

Date: Fri, 21 May 2004 16:00:18 -0700

As Dan said:

StickeyKeys. Turn it off.

Steve

anonymous@discussions.microsoft.com wrote:

> *Brand new keyboard, it did it with another one too.*  
>  
>  
>  
>>-----Original Message-----  
>>And what would you like us to do to fix your physical  
>  
> *problem. You have the*  
>  
>>*keyboard in front of YOU. Fix it or replace it!*  
>>  
>>--  
>>Regards:  
>>  
>>Richard Urban  
>>  
>>*aka Crusty (-: Old B@stard :-)*  
>>  
>>"Nick Tassone" <anonymous@discussions.microsoft.com>  
>  
> *wrote in message*  
>  
>>*news:17dd01c43ed0\$ebe6aee0\$3a01280a@phx.gbl...*  
>>  
>>>*Lately my shift and control keys have been sticking.*  
>  
> *It*  
>  
>>>*has been causing major problems in word processing, as*

microsoft.public.windowsxp.general: Re: Shift and Control Key's stick

>>>*the words will go all caps or start using shortcuts*

>

> *with*

>

>>>*the control key. Please help as soon as possilbe!*

>

> *Thank*

>

>>>*you!*

>>

>>

>>.

>>