

Re: cannot detect camera/card reader

Source:

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.general/2004-05/5725.html>

From: RJK (*notatospam_at_hotmail.com*)

Date: 05/05/04

Date: Wed, 5 May 2004 22:36:15 +0100

...other thoughts...you have got your USB ports switched on in bios, and present in Device manager ?

Info:-

> *From <http://www.talkroot.com/archive/topic/23853-1.html>*

"USB devices are supposed to draw between 50 and 500 milliamps. If your camera is drawing more than 500 milliamps, the port can't provide it. And along the same lines, if the camera draws less than 50 milliamps, the port will not recognize it.

Commonly, you can spot this problem if a peripheral works on a powered hub, but not with a port. It will also show up if other peripherals are working, but then quit when the device with a problem is hooked up."

regards, Richard

"Jim Macklin" <p51mustang[threeX12]@xxxhotmail.calm> wrote in message news:u4SaCLuMEHA.2388@TK2MSFTNGP09.phx.gbl...

> *Are you using full charged batteries in the camera or an external power to the camera. This is noted in my Fuji camera manual. I now use a card reader (Lexar USB 2.0 Multi reader \$28 at Wal-Mart) rather than connecting the camera. www.lexarmedia.com*

>

>

> --

> *The people think the Constitution protects their rights; But government sees it as an obstacle to be overcome.*

>

>

> "RJK" <notatospam@hotmail.com> wrote in message news:OEea3BuMEHA.1348@TK2MSFTNGP10.phx.gbl...

> | *...if yours is a USB low voltage / signal problem, you can buy externally*

> | *powered USB hubs :-)*

> |

> | *regards, Richard*

> |

> /
> / you can buy ex
> / "RJK" <notatospam@hotmail.com> wrote in message
> / news:eHvp6\$tMEHA.1468@TK2MSFTNGP12.phx.gbl...
> / > If it's a Via chipset on your motherboard, this could be
> the problem.
> / > Usually, on such systems you can force XP to recognize
> your USB device by
> / > going to Control Panel / double-click the System icon /
> click the hardware
> / > tab / click the Device manager button / right-click the
> tiny PC at the top
> / > of the "tree" and left-click to select "scan for
> hardware changes." HTH
> / >
> / > regards, Richard
> / >
> / >
> / > "les" <anonymous@discussions.microsoft.com> wrote in
> message
> / >
> / > news:B40732DB-6875-483A-A668-A1CBE39F05E0@microsoft.com...
> / > > My pc doesnt detect my camera or card reader when
> plugged into USB. Both
> / > work ok on other PC's. cant get photos off camera
> because it say's it is
> / not
> / > connected?? No other drivers available.
> / >
> / >
> /
> /
>
>