

Re: ACPI Howto (Advanced Configuration and Power Interface)

Source:

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.general/2004-08/21002.html>

From: Mike (yop__at__swip.net.se)

Date: 08/18/04

Date: Wed, 18 Aug 2004 20:20:55 +0200

Hi. well it was like this, i updated:) humm the driver and i ended up with a standard pc instead of the acpi. Ok i just go back to the old driver or just instal the acpi driver again. but "does not compute..." :)
:) so to speak

CS wrote:

> On Wed, 18 Aug 2004 08:01:25 +0200, Mike <yop_@_swip.net.se> wrote:

>

>

>>Hello. It's like this... I use to have my computer setup as ACPI.

>>But somehow it's not anymore.

>>

>>If I check the HW device manager under computer, it use to say "ACPI"

>>computer but now it's telling me that it's a Standard PC.

>>So i just when it to the properties and try to change it back but..

>>there is only one kind of driver there and that is for a standard pc?

>>

>>Using MSI Motherboard that support ACPI that i know for sure.

>>Windows XP Swe SPI

>

>

> You can not change the HAL from "Standard PC" to "ACPI" without a

> complete re-install of XP or at least a repair install. If you

> attempt to change the HAL without re-installing it will very likely

> cause your XP NOT to boot.

>

> You say you use to have your computer setup as ACPI. What did you do

> to change it? Did you re-install XP?