

# Shortcut missing for erasing CD-RW disc

---

*Source:*

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.general/2006-08/msg07411.html>

---

- *From:* "History Fan" <[UnknownPlacesonEarth@xxxxxxxxxxxxxx](mailto:UnknownPlacesonEarth@xxxxxxxxxxxxxx)>
  - *Date:* Sun, 27 Aug 2006 18:35:26 -0400
- 

My PC is running XP Home SP2, with a DVD-RW drive.

Today, I have been deleting and adding files to several CD-RW discs. If I open My Computer, and right-click my DVD-RW drive, there used to be a shortcut saying..."Erase this CD-RW disc." But now it is gone. There are other ways to erase the disc, but I miss having that convenient shortcut. Any quick way to fix this? Thanks.

.