

## Re: Video input device not recognised?

---

*Source:*

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.general/2006-12/msg04690.html>

---

- *From:* "Rock" <[rock@xxxxxxxxxx](mailto:rock@xxxxxxxxxx)>
  - *Date:* Mon, 11 Dec 2006 11:42:11 -0800
- 

"Roger Gall" wrote

I had been using a Texas Instruments O.H.C.I compatible IEEE 1394 Firewire card with Windows 98 to input DV from a Sony camcorder – I sometimes had this following problem but by switching things on or off – was able to deal with the problem and input DV video.

I have installed this card into my new PC with Windows XP Media Center Edition but neither of the two programs installed on the system Window Movie Maker and ROXIO My DVD will recognise the device to enable video to input.

Neither these programs or Windows XP seem to very helpful in addressing the problem. They refer to configuring the device but how to do this does not seem to be very clear or to be possible.

The 'Device Not Recognised' message does come up in Movie Maker when the camcorder is switched on. So it at least recognises it to some extent.

The card looks to be installed OK and the hardware is recognised as installed and working correctly.

I have checked that the camcorder is still able to input DV video via Firewire cable to the DVD recorder and it is. The problem is getting the PC and these programs to recognise the device.

The only difference with the set-up is that I have purchased a new Firewire cable – as I seemed to have lost the original one but I would thought this would have helped – rather than hindered.

Any help would be much appreciated.

Have you checked with the card vendor?

.