

Re: USB disk drive (or flash) does not get drive letter

Re: USB disk drive (or flash) does not get drive letter

Source:

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.general/2006-12/msg06912.html>

- *From:* Uwe Sieber <mail@xxxxxxxxxxxxxxxx>
 - *Date:* Sun, 17 Dec 2006 23:20:54 +0100
-

Ron Carr wrote:

When I plug in a USB external disk drive, or a flash memory card, the device does not show in Windows Explorer. Disk management shows the disk drive (not the flash memory) but it has no drive letter and I cannot assign one (Change drive or path grayed out). I do have an E: drive which is evidently the memory card port on my photo printer – never used. (I have 2 hard disks C and D, my CD and DVD are assigned P and Q).

Sounds to me like the daemon tools problem:

http://www.uwe-sieber.de/usbtrouble_e.html#daemon

Uwe

.