

Re: CD/DVD Drive Not Detected

Source:

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.general/2007-08/msg00120.html>

- *From:* "Sandgroper" <steveray@xxxxxxxxxxxxxxxxxxxxxx>
 - *Date:* Wed, 1 Aug 2007 23:01:21 +0800
-

"R. McCarty" <PcEngWork-NoSpam_@xxxxxxxxxxxxxxxxxx> wrote in message news:%231NxZIC1HHA.3768@xxxxxxxxxxxxxxxxxxxxxx

Check both Controllers for the M/S taps and ensure that the one serving your optical drive is not set to "None". Device Manager IDE ATA/ATAPI Controllers. Open the Primary & Secondary Controllers detail box and click the Advanced (TAB). You should see a box "Device Type" that indicates what is connected.

*Some combinations of devices on the same controller channel will exhibit this type of behavior. You can test this by removing the Seagate drive and see if the Optical is properly detected by XP.

Thanks for the reply.

When I checked out the IDE ATA/ATAPI Controllers , straight after boot up when the CD/DVD drive was not detected is showed :

Device 0 – Device Type = Auto Detect
Device 1 – Device Type = Auto Detect – greyed out

After a rescan of System

Device 0 – Device Type = Auto Detect greyed out
Device 1 – Device Type = Auto Detect – greyed out

It looks like I maybe need to check the jumper settings on the CD/DVD drive.

True Multitasking is having three computers and a chair with wheels.

Sandgroper

Re: CD/DVD Drive Not Detected

Remove KNICKERS to Email
steveray@xxxxxxxxxxxxxxxxxxxxxx