

Re: Stransge behaviour with external keyboard: Cursor -> Print screen

Source:

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.hardware/2004-02/1675.html>

From: Yves Leclerc (*yleclercNOSPAM_at_maysys.com*)

Date: 02/09/04

Date: Mon, 9 Feb 2004 10:09:20 -0500

A standard PS/2 keyboard can not normally be used with a generic USB adapter. The keyboard use different "keycodes" than what the USB is expecting. You should only use a keyboard that comes with the manufacturer supplied USB adapter.

"Jens Müller" <jens_0.no.-spam@hotmail.com> wrote in message news:uW619am7DHA.1428@TK2MSFTNGP12.phx.gbl...

> *Hello,*

>

> *I connect a PS/2 keyboard via an active USB adaptor to a notebook with XP. If num lock is on, every time I press one of the four arrow keys he does also act as if PrintScreen was pressed.*

>

> *How can that be?*

> *Thank you,*

> *Jens*

>