

Re: MP3 player not detected

Source:

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.hardware/2004-04/4312.html>

anonymous_at_discussions.microsoft.com

Date: 04/29/04

Date: Wed, 28 Apr 2004 19:05:55 -0700

I have evey driver intsalled. I've even reinstalled.

>-----*Original Message*-----

>*You need to install the software that came with the MP3 player, or download*

>*the latest drivers/software from the website of the manufacturer of your MP3*

>*player.*

>

>*Bobby*

>

>*"Ryan" <ryan_krueger@hotmail.com> wrote in message*

>*news:5ae601c42d87\$485dd3c0\$a601280a@phx.gbl...*

>>*I recently but not too recently reformatted my computer*

>>*including reinstalling Windows XP. I plugged in my MP3*

>>*player and for some reason it does not detect it.*

Before

>>*I had reformatted it was detected just fine and*

>>*everything worked. I have installed SP1a and all the*

>>*available updates that I think might have anything to*

do

>>*with USB. I'm not sure what the problem is. Please*

help.

>

>

>.

>