

Error Code 28 on DVD Drive Install

Source:

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.hardware/2004-06/3251.html>

From: cj (*jenlmaster_at_hotmail.com*)

Date: 06/22/04

Date: Tue, 22 Jun 2004 16:27:21 -0700

I purchased a Sony DX-530UL External DVD Burner and attempted to attach it to my laptop via firewire (1394) cable. XP did not recognize the drive and there were no drivers on the cdrom supplied with the DVD Burner. Sony claims it is a MS XP issue. The exact error is:

This device is not configured correctly. (Code 1)

To reinstall the drivers for this device, click Reinstall Driver.

The location is: on OHCI Compliant IEEE 1394 Host Controller

It states to reinstall drivers but none exist?? At a loss, any ideas?