

microsoft.public.windowsxp.hardware: CD-RW Drive and DVD Drive won't read the disk

CD-RW Drive and DVD Drive won't read the disk

Source:

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.hardware/2004-10/1524.html>

From: Joe (*Joe_at_discussions.microsoft.com*)

Date: 10/10/04

Date: Sun, 10 Oct 2004 02:25:04 -0700

When I put a disk into either of the drives I get a message " Please insert disk into drive" when I try and access the disk. The drive icon in explorer changes from CD-RW drive to CD-R or CD Rom depending on the disk inserted, but explorer will not open the disk, get message as above.

Any ideas

Thanx