

Re: Windows Freezes

Source:

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.hardware/2004-12/2421.html>

From: R. C. White (*rc_at_corridor.net*)

Date: 12/27/04

Date: Mon, 27 Dec 2004 11:16:13 -0600

Hi, playne.

Many possibilities, since you didn't bother to tell us anything at all about your hardware. :>(

We don't even know whether your USB device is a camera, or a printer or what? Much less make and model. Also, we don't know if your USB port is built into your computer or motherboard, or an add-on card, or a USB hub.

But, generically, you might need to update the drivers for your USB device itself, or install (or update) the drivers for your USB device. The Properties screens for some USB devices have a Policies tab where you can choose between Optimize for performance and Optimize for quick removal.

RC

--

R. C. White, CPA
San Marcos, TX
rc@corridor.net

Microsoft Windows MVP

"playne" <playne@discussions.microsoft.com> wrote in message
news:9F68522D-738E-4371-AF04-CED97280F849@microsoft.com...

> Windows freezes anytime I plug in or unplug a USB device. What is causing
> this?