

# Re: usb device frustration

---

*Source:*

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.hardware/2006-04/msg00171.html>

---

- *From:* "Cari \ (MS-MVP)" <[Newsgroups1@xxxxxxxxxxxxxxxx](mailto:Newsgroups1@xxxxxxxxxxxxxxxx)>
  - *Date:* Mon, 3 Apr 2006 13:51:44 -0700
- 

For the camera, a good solution is to use a card reader. It works better... particularly when a speedy resolution is desired!

—

Cari (MS-MVP)  
Printing & Imaging  
<http://www.coribright.com/windows>

"Donny" <[Donny@xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx](mailto:Donny@xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx)> wrote in message  
<news:A84C18AE-7743-4D00-AAE0-CA9E98D23C75@xxxxxxxxxxxxxxxx>

Hi

I'm sorta new to this but i have been having similar problems with my USB devices i have tried the fore mentioned remedy to no avail. The symptoms of my problem are similar but not the same, When ever i connect my ipod or digital camera instead of being greeted by the little chime and a program starting all i get is the safely remove icon. Then when i go to " My computer to try and activate either device, (they appear as removeable disk H and I) the message " The disk drive in H: or I: is not formatted do you want to format. Now i tried the format once with the ipod and it was unsuccessfull but i will not try that with my camera is there are way to many important photo's to loose. I have tried many times unsuccessfully to reload all of the drivers for the ipod and camera i have even tried un installing the usb drivers. I am at wits end and i need to move the files off my camera as my partner is due to give birth any day now and i need the space.

Any help would be greatly appreciated

Re: usb device frustration

Donny