

Re: DVD Drive.

Source:

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.hardware/2006-04/msg01007.html>

- *From:* "Bob Hamel" <bobber128@xxxxxxxxxxxxx>
 - *Date:* Wed, 19 Apr 2006 21:34:15 -0400
-

"Bob Hamel" <bobber128@xxxxxxxxxxxxx> wrote in message
news:uS6GWB6YGHA.4168@xxxxxxxxxxxxxxxxxxxxxxxxxxxxx

I am Having the same problem's . I have a leadtek PVR 2000, and a Plextore 760 A DVD Burner . And sometimes it will burn in DL and sometimes it will not.

I am running

windows XP Home SP 2
1 Plextor DVD-RW 760-A
1 PLEXTOR CDRW
2- 512 CRUCIAL MEMORY
ASUS A8N-SLI MOTHERBOARD
4-WD'S 80 GIG 0-1 RAID CONFIG.
1 LEADTEK PVR 2000
2 MSI NX6600 GT'S
1-AMD 2.2 GIG SLOT 939

Sometimes it will burn sometimes it wont.
Sometimes it will finalize, sometimes it wont. sometimes leadtek works good and burns direct to plextor sometimes it wont, sometimes easy media creator 8 will work sometimes it wont.

Did the bios thing from plextor, also dumped driver's for plextor, and motherboard, reinstalled emc8, same with pvr2000. And I am using the correct media, also switched burning speed's.

I am baffled , also have plenty of room on hard drives to burn movies, and plenty of memory.

"Peter" <Peter@xxxxxxxxxxxxxxxxxxxxxxxxxxxxx> wrote in message
news:701C0299-9E19-4F25-921E-70FF526872F8@xxxxxxxxxxxxxxxxxxxxx

What is the brand and model of your DVD R/W drive?
It seemed that it does not support DVD-R disk but it is a very rare case
as

Re: DVD Drive.

most of the present DVD R/W drives support multi format of various DVD disks.

Try update the firmware of your DVD R/W drive.

--

Peter

"Andy W" wrote:

"Peter" wrote:

Have you installed any DVD codec, e.g.
Power DVD, InterVedio, Nero
Show Time
etc.?

--

Peter

"Andy W" wrote:

HELP. When there is no
disc in the DVD drive it
says its a DVD-RW
drive which
is right, but when i put in a
DVD it says it is a CD Drive
and that
it cant
run it. What should I do.

Yes quite a few, but it mainly does it with blank DVD-R's

I have two Plextor DVD DRIVES both with the same problems. I have updated
Bios for both 2 date.

1= PX760A

2=PX740A

10X DVD+R DL

6X DVD-R DL

18X DVD±R

8X DVD+RW

Re: DVD Drive.

Re: DVD Drive.

6X DVD-RW
16X DVD-ROM
48X CD-R
24X CD-RW
48X CD-ROM

I am using the required media for both. I am also using media creator 8 for the burning which is recommended for the 760 A. When I use the DL Disk and I go to start ,My computer, Select properties for the DVD drive I am using for recording(760 A) and select recording tab on the right click. And select the checkbox for recording on this drive. select apply and close out. I notice under my computer that the drive changes from , D to E. The nvidia drivers has an IDE Driver imbedded in the setup drivers program and I am not using them. Just the generic drivers for windows. When I put a 8.5 gig Disk in the drive . The drive changes to CDRW DRIVE INSTEAD DVD-RW. I am lost.

Re: DVD Drive.