

Re: Microphone

Source:

http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.help_and_support/2004-08/2258.html

From: Dan (*me_at_123.com*)

Date: 08/08/04

Date: Sun, 8 Aug 2004 10:32:49 +0000 (UTC)

Thanks very much, i'll try that.

Thanks

Dan

"Colin Cogle" <MasterNoSpamColinIH8SpamX@SpamBad.SpamSuxearthlink.net> wrote in message news:OeIM2%23RfEHA.3964@TK2MSFTNGP12.phx.gbl...

> *Dan wrote:*

>

> > *I have a micropohne that wont work. I have tried the microphone on my other*

> > *computer and it works fine, but it will not work on this computer. My sound*

> > *& audio settings show that it is set up to use SoundMAX, but i cannot find*

> > *this anywhere on my computer.*

> >

> > *Any help as to how i can get this working would be appreciated.*

> >

> > *Thanks*

> >

> > *Dan*

> >

> >

>

> *Check under Volume Control (the little speaker icon in your tray, or*

> *Start > Run > sndvol32). Make sure your mic volume isn't muted or*

> *turned down really low. Likely that's the problem. If not, something's*

> *up; keep reading.*

>

> *If you have more than one audio device on your computer (like an add-in*

> *sound card and onboard sound), make sure you're plugging it into the*

> *right mic jack.*

>

> *Also disable any sound devices that you're not using. Example: If you*

> *have an add-in audio card (one that goes in a PCI/PCI-X/ISA slot or a*

- > *USB/FireWire port), disable your motherboard's built-in sound in the*
- > *BIOS (if you have it). Likewise, if you're using your motherboard's*
- > *built-in sound devices, take out the PCI/PCI-X/ISA/USB/FireWire card.*
- > *You may think that twice the sound cards makes for twice the fun, but*
- > *that's just twice as many headaches.*
- >
- > *If possible, get another mic and test your audio device's connection.*
- > *It's rare, but you may even have broken your mic jack somehow.*
- > --
- > *Colin*