

USB mass storage device problems

Source:

http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.help_and_support/2004-11/2431.html

From: Colin (Colin_at_discussions.microsoft.com)

Date: 11/07/04

Date: Sat, 6 Nov 2004 22:52:01 -0800

Current Computer Specs:

AMD Athlon 3000+ XP

Gigabyte GA-7N400 Mobo

512MB Kingston PC2700

ASUS Geforce 4 Ti4200

Western Digital Caviar SE 120GB 7200RPM Hard Drive

Windows XP Pro (SP2)

DIRECT X 9.0b

Logitech mx500

Logitech Elite Keyboard

Viewsonic 17" Flatscreen

Ok, i have a digi cam and a mp3 player and i have all up to date drivers for my hardware but when i try and turn on my portable device it doesnt auto detect it; just gives me a windows message "new hardware found, usb mass storage device not found" and the hardware wizard pops up and it always fails to update. Ive done everything i could think of, updating my mobo drivers, using old drivers, not using any of my usb ports "mouse/keyboard". I dont know what to do, how the heck do i get my pics from my camera? how do i use my mp3 player now if i cant use my usb

its a fujifilm a210 and a rca lyra mp3 player.

someone please help me, this is making me mad.