

# CD DRIVE CAN'T OPEN

---

*Source:*

[http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.help\\_and\\_support/2005-06/msg05650.htm](http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.help_and_support/2005-06/msg05650.htm)

---

- *From:* "Random Guy" <spam@xxxxxxx>
  - *Date:* Sat, 25 Jun 2005 16:35:10 -0400
- 

I push the button of a cd drive but it doesn't open. It makes strange noises. There is no disc inside. Could it be maybe hot weather or something. What can I do?

- 
- *Follow-Ups:*
    - ◆ ***Re: CD DRIVE CAN'T OPEN***
      - ◇ *From:* Carey Frisch [MVP]
  - Prev by Date: ***Re: Hard Drive Help***
  - Next by Date: ***Re: computer shuts off***
  - Previous by thread: ***Microsoft Fax installation program***
  - Next by thread: ***Re: CD DRIVE CAN'T OPEN***
  - Index(es):
    - ◆ ***Date***
    - ◆ ***Thread***