

Re: Missing drives G, H & I

Source:

http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.help_and_support/2005-12/msg01873.htm

- From: "needlove" <crunch@xxxxxxxxxxxxxxxxxxxx>
 - Date: Mon, 12 Dec 2005 11:37:49 -0700
-

Hello,

Make sure "smart card" service is enabled and set to automatic. What interface does it use, if USB, what version? check device manager for any interface problems. If your device came with a CD insert it and see if it will do a repair. You may need to uninstall the software and reinstall.

>

"Wendy" <Wendy@xxxxxxxxxxxxxxxxxxxxxxxxxxxx> wrote in message news:AD06F409-9B38-4147-8E8E-C64A85EEED8D@xxxxxxxxxxxxxxxxxxxx

>I have Windows XP. I should have drives A, and C-I, but only A, C, D & E
>are

> currently visible and accessible. Drives H & I are the ones I used for my
> digital camera's smart cards. I've re-booted, re-started, and done
> everything
> I can think of to make these drives re-appear, with no luck.

>

> The last time the drives were visible, I put my smard card in the I drive.

> It kept telling me to insert the card, although I already had. Then, as I
> was

> looking at it, the drive disappeared and has never re-appeared.

>

> How do I restore these drives? I have up-to-date virus and spy-ware

> blocking

> software, so don't believe it's a virus.

> --

> Wendy

.

- Prev by Date: [*Many Programs*](#)
- Next by Date: [*Re: Many Programs*](#)
- Previous by thread: [*Re: Missing drives G, H & I*](#)
- Next by thread: [*Re: Hard Drives?*](#)
- Index(es):

Re: Missing drives G, H & I

- ◆ Date
- ◆ Thread