

Re: DVD+RW, Cannot write to anymore

Source:

http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.help_and_support/2006-10/msg01233.htm

- *From:* fornewsgroups@xxxxxxx
 - *Date:* 7 Oct 2006 17:53:03 -0700
-

x-no-archive:

I managed to erase. Then I tried writing to the DVD+RW using Sonics "Record Now" version 6.5 (which was included with the laptop).

But it states about 14 minutes to left to burn the files, but goes to a

verifying state after about 30 seconds. THEN after about 10 more seconds it says complete.

Then I go to read the DVD+RW and it has no files.

Checking the properties it says both 0 bytes for used and free space, with a file system of "RAW".

YET when I look at it in Record now, it states "DVD+RW 4483 MB Free."

Again I can burn to DVD+R's.

Does that offer any insight?

.