

Help ! my PC doesn't recognise any more my DVD and CD R/W drives

# Help ! my PC doesn't recognise any more my DVD and CD R/W drives

---

*Source:*

[http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.help\\_and\\_support/2007-03/msg02248.htm](http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.help_and_support/2007-03/msg02248.htm)

---

- *From:* "Daniel" <[notmyrealaddress@xxxxxxxxxx](mailto:notmyrealaddress@xxxxxxxxxx)>
  - *Date:* Tue, 20 Mar 2007 00:02:46 +0100
- 

Hello everybody !

I just don't know what I did or what happened.

my PC doesn't see any more my DVD and CD R/W drives.  
in device manager there is a yellow exclamation mark near each of these drives, and an indication of Windows not being able to load the corresponding pilots which, according to what's indicated in the property box, could be missing or corrupted.

I restored to a previous date, to no avail.  
I tried to uninstall each of these 2 devices. No change.

anybody ?

thanks in advance for your precious help.

brgds,  
Daniel

.