

## RE: Error C00D1176 from WMP 10

---

*Source:*

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.music/2005-07/msg00099.html>

---

- *From:* Mac <Mac@xxxxxxxxxxxxxxxxxxxxxxxxxxxxxx>
  - *Date:* Sat, 9 Jul 2005 12:56:01 -0700
- 

I get 6 tabs: General, Auto Play, Hardware, Sharing, Settings, and Direct CD 5.0 Options.

I have used the drive to copy photos and to do back-ups.

I have Roxio Easy CD Creator 5 -- if that's of any help. It is re-writable.

Is that the same as a "burner"?

I hate feeling so helpless and I really appreciate your help. I honestly don't know where else to turn.

Many thanks.

"Byte" wrote:

- > When you rightclick your CD-Rom and click Properties, what tabs do you see?
- > You should see: General, AutoPlay, Hardware, Sharing and Recording. If you
- > do not have 5 tabs, than the CD drive is not properly installed, or it does
- > not
- > have the recording capability, it may be just a CD drive and not a burner.
- > Have you used this drive as a burner before?

> --

- > Some days you're the windshield,
- > some days you're the bug.

>

>

> "Mac" wrote:

>

- >> Thank you. I have verified the connection and it's reporting as "in proper
- >> working order". I don't see a specific recording tab under CD-ROM
- >> Properties, nor an "enable CD recording on this drive". However anything I
- >> do see there seems to be marked appropriately. Except maybe the speed?
- >> It's: read @ 40x and write @24x. Is this the norm?

>>

>> "Byte" wrote:

>>

- >>> C00D1176: Cannot find a CD recorder
- >>> Windows Media Player cannot burn (copy) the files because either it cannot
- >>> find a CD burner (recorder), or Windows might not recognize it. Verify the
- >>> connection between your computer and the burner. If the burner is connected
- >>> properly, use the Add Hardware Wizard in Control Panel to install the
- >>> appropriate driver file, and then try burning the files again.

RE: Error C00D1176 from WMP 10

>>> For more information about the Add Hardware Wizard, see Windows Help.  
>>> Next. Doubleclick the My Computer icon on desktop, then rightclick the CD-ROM  
>>> drive and click Properties. Click the Recording tab and tick "Enable CD  
>>> recording  
>>> on this Driv