

## Stop Error When Trying to do initial setup

**Source:**

[http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.perform\\_maintain/2004-02/0849.html](http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.perform_maintain/2004-02/0849.html)

---

**From:** ryan (anonymous\_at\_discussions.microsoft.com)

**Date:** 02/05/04

Date: Thu, 5 Feb 2004 11:15:37 -0800

I figured it out and I wanted to post it to help someone else later on. I had a 40 pin ide cable instead of a 80 pin.

>-----Original Message-----

>I am building two monster computers to run some high end

>CAD software for the company that I work for. I have got

>everything built and the BIOS all set as far as I know

>and when I go to load Windows XP I get through all the

>setup partition and it does it's thing untill when it

>restarts it flashes the Win XP front page and then comes

>up with a stop error Unmoutable\_boot\_volume

>

>Stop: 0x000000ED (0x897CF9E0, 0xC0000185, 0x00000000,  
>0x00000000)

>

>Can anyone help me with this??

>

>