

Re: Media Bay

Source:

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.photos/2006-10/msg00179.html>

- *From:* CaitiNic <CaitiNic@xxxxxxxxxxxxxxxxxxxxxxxxxxxxx>
 - *Date:* Fri, 27 Oct 2006 00:13:02 -0700
-

Thank you for all your help

"John Inzer" wrote:

CaitiNic wrote:

Im using a sony memory stick (i put it into a stick duo adapter to make it fit), and i wouldnt know where to start with formatting it.

=====
I don't have a specific solution for you and can only offer some ideas.

The adapter may be the problem. Have you tried connecting your camera by USB to see if the card would be recognized?

Could you try the stick in a different computer to see if you get the same result? Even on a display model in a retail store...most have media readers installed now.

Beyond that...maybe the following articles will offer some ideas:

(318623) Memory Stick or PC CARD Is Not Visible in the My Computer Information - Hardware Pane in Windows XP
<http://support.microsoft.com/?kbid=318623>

(320281) AutoPlay May Not Work After You Insert a "Memory Stick"
<http://support.microsoft.com/?kbid=320281>

(303011) Sony Memory Stick Does Not Work After You Format It with Your Computer
<http://support.microsoft.com/?kbid=303011>

Re: Media Bay

(898456) A removable media device is no longer recognized after it is reformatted in Windows XP

<http://support.microsoft.com/?kbid=898456>

--

*****John Inzer*****

MS Picture It! MVP

*****Digital Image*****

Highlights and FAQs

<http://tinyurl.com/aczzp>

*****Notice*****

This is not tech support

.....I am a volunteer.....

Solutions that work for me may not work for you.

Proceed at your own risk.

Need a Web Host?

*****Consider*****

Annex Technologies

<http://www.annex.com/>
