

Re: Capture Device not recognized in Movie Maker

Source:

<http://www.tech-archive.net/Archive/WinXP/microsoft.public.windowsxp.video/2007-08/msg00006.html>

- *From:* "PapaJohn" <papajohn@xxxxxxxxxxxxxx>
 - *Date:* Fri, 3 Aug 2007 14:28:56 -0400
-

it's called a firewire card

website references are to www.papajohn.org

PapaJohn

"Velo" <Velo@xxxxxxxxxxxxxxxxxxxxxxxxxxxx> wrote in message
<news:51E4C1A7-E1C7-4ED8-9A9F-579030DEE189@xxxxxxxxxxxxxxxxxxxx>

Hi Cari, thanks for the response. I did not know that I was stepped down to analog by using a usb connection. I had thought of purchasing a firewire connection so I guess this is what I will need. I dont have a fire wire card (guess that is what it is called) so I assume I will have to purchase some kind of card? Do you know what this card is called?

Thank you

"Cari (MS-MVP)" wrote:

Because Movie Maker likes digital video which is captured by firewire. USB video is considered analog, despite the fact you may indeed have a digital camcorder, you're not outputting digital video if you use USB.

Cari (MS-MVP)
Windows Technologies – Printing & Imaging
<http://www.coribright.com/windows>

"Velo" <Velo@xxxxxxxxxxxxxxxxxxxxxxxxxxxx> wrote in message
<news:584492A7-B96F-4E62-BF57-C4CD18C906C9@xxxxxxxxxxxxxxxxxxxx>

Re: Capture Device not recognized in Movie Maker

Hello,

I have my video cam connected to my computer by USB (not firewire). I have it turned on and the video cam says "USB Mode" like it should. My computer shows the camera as a removable disk in explorer. When I go to MM to capture it gives me an error: A video capture device was not detected. Verify that device was turned on and connected properly".

Why is MM not recognizing my video cam?

thank you