

WINCE : Display driver : VGA to QVGA and QVGA to VGA mode

Source:

<http://www.tech-archive.net/Archive/WindowsCE/microsoft.public.windowsce.embedded/2008-04/msg00386.html>

- *From:* ~:BLUE::~ <BLUE@xxxxxxxxxxxxxxxxxxxxxxxxxxxxxx>
 - *Date:* Thu, 24 Apr 2008 14:17:01 -0700
-

Hi all,

I came accross this tricky situation in my project that

I want to change the resolution of display driver in run time,

for some reasion I dont get the VGA display out put,

if I make changes and restart the h/w it take effect.

Is there a way to tell a GWES when display driver changes its mode?

Thanks

BLUE-ice

.