

Re: unable to boot cepc from HD

Source:

<http://www.tech-archive.net/Archive/WindowsCE/microsoft.public.windowsce.platbuilder/2004-10/1370.html>

From: Sujith (*sujithss_at_hotmail.com*)

Date: 10/29/04

Date: Fri, 29 Oct 2004 10:37:01 +0530

post the error message may be some one can help.

Regards
Sujith

"Radha Kumar Reddy" <RadhaKumarReddy@discussions.microsoft.com> wrote in message news:7E1F3B24-08AD-4C79-8D62-16ABF2D54F73@microsoft.com...

> *Thanks Sujith,*
> *I tried to boot winCE from hard disk. I did what exactly was told in the*
> *tutorial ->*
> *created to disks (setup and boot) ,*
> *formatted the HD,*
> *setup the environment,*
> *copied the files from bootdisk to HD,*
> *copied the nk.bin by connecting this HD to another system as slave.*
> *And made change in autoexec.bat to loadcepc nk.bin. (I didnot give any*
> *cmd*
> *line options)*
> *But when I boot the cepc, it gives the splash screen and jumps to blue*
> *screen with some error number.*
>
> *I do not understand why it doesnot boot. I am left with no clues. any help*
> *in this regard is of great appreciation.*
>
> *thnx.*
> *Radha Kumar Reddy.*
>
> *"Sujith" wrote:*
>
> *Hi,*
> *so basically it is downloading..*
> *good. may be you can trap the debug messages using the other COM port*
> *and*
> *check-out what went wrong.*
> *possible options could be.. the display driver should be the same as the*
> *target machine.. not host machine..*
> *more over are you able to get the machine id in the configure remote*

> > *connection, ethernet.settings..?*
> > *if yes.. ok. if no.. add the correct driver for the device(ethernet). it*
> > *should work at any cost..*
> > *regards*
> > *Sujith*
> > *"Radha Kumar Reddy" <Radha Kumar Reddy@discussions.microsoft.com> wrote*
in
> > *message news:A21B40CB-2DBA-45CA-9242-0421485DBE81@microsoft.com...*
> > > *h/w platform: a p4 desktop*
> > > *winCE platform used : 5.0 CEPC*
> > > *eboot : when I boot from floppy and select eboot option, it tries to*
> > > *access*
> > > *the host machine but in vain, displays an error msg saying "jumping to*
> > > *0x...." some hex code.*
> > > *sboot : I connected the target PC to host using serial cable, used*
sboot
> > > *option to download. the target displays msg "jumping to 0x...." some*
hex
> > > *code*
> > > *other than the above. BUT the host **starts** download process to*
target.
> > > *takes a lot of time. but at the end nothing happens at target even*
after
> > > *download completes.*
> > >
> > > *I am new to WinCE. unable to understand whats happening. please help*
me
> > *out.*
> > > *Thanks.*
> > > *Radha Kumar Reddy.*
> >
> >
> >