

microsoft.public.windowsce.platbuilder: How do I enable the PPPoE in WinCE4.2 ?

How do I enable the PPPoE in WinCE4.2 ?

Source:

<http://www.tech-archive.net/Archive/WindowsCE/microsoft.public.windowsce.platbuilder/2005-02/0387.html>

From: Wallen (wallen9927_at_pchome.com.tw)

Date: 02/02/05

Date: Wed, 2 Feb 2005 19:36:34 +0800

Dear all:

I Build a WinCE4.2's Image.

Why can I see the PPPoE in connect but it is disable?

I can connect Internet via RJ-45(local lan)

But I want connect Internet use PPPoE.

what do I need to do to enable PPPoE?

thanks,

Best Regards,

Wallen