

Re: How to use realloc and free in an ISR

Source:

<http://www.tech-archive.net/Archive/WindowsCE/microsoft.public.windowsce.platbuilder/2006-12/msg00397.html>

- *From:* "Bruce Eitman [eMVP]" <beitman.nospam@xxxxxxxxxxxxxxxxxxxxxxxxxxxx>
 - *Date:* Thu, 7 Dec 2006 09:41:14 -0500
-

If you have time to do that in the ISR, why not move that to the IST?

—

Bruce Eitman (eMVP)
Senior Engineer
beitman AT applieddata DOT net

Applied Data Systems
www.applieddata.net
An ISO 9001:2000 Registered Company
Microsoft WEP Gold-level Member

"Ole" <ole@xxxxxxxxxx> wrote in message
news:OyIfGgGHHA.4712@xxxxxxxxxxxxxxxxxxxxxxxxxxxx

Hi,

How to use realloc and free in an ISR dll? or should I use some other technique?

Thanks
Ole