

Re: How to do input/output in telnet console?

Source:

<http://www.tech-archive.net/Archive/WindowsCE/microsoft.public.windowsce.platbuilder/2007-02/msg00395.html>

- *From:* "John Spaith [MS]" <jspaith@xxxxxxxxxxxxxxxxxxxxxxxx>
 - *Date:* Tue, 13 Feb 2007 09:56:01 -0800
-

printf() should just work. I'd recommend checking the following

HKEY_LOCAL_MACHINE\Drivers\Console

And make sure OutputTo is NOT present at all, delete the value itself if so.

I think what's happening is you're output is being redirected to COM1 because OutputTo=1 or whatever it's set to.

--

John Spaith
Development Lead, Windows CE
Microsoft Corporation

Check out the CE Networking Team Blog at <http://blogs.msdn.com/cenet/>.

This posting is provided "AS IS" with no warranties, and confers no rights. You assume all risk for your use. © 2006 Microsoft Corporation. All rights reserved.

<eitan.bar@xxxxxxxx> wrote in message
<news:1170939142.940652.280540@xx>

On Feb 8, 11:34 am, cor...@xxxxxxxxxxxxxxxxxxxxxxxx (Corey Burke [MS]) wrote:

I think telshell.exe is the Telephone UI for WM Smartphone and doesn't have any telnet serving capabilities.

Are you trying to output text from your app on the screen of the smartphone? I believe Windows Mobile doesn't have the command console (SYSGEN_CONSOLE) in the image. What Telnet server program are you running?

Thanks!
-Corey

Re: How to do input/output in telnet console?

Hi Corey,

You're probably right about telshell.exe :)

I'm kind of a newbie to this whole area (linux person in origin).

anyways, when I telnet to the platform, I see another CMD.exe process running, and the telnet prompt is:

"Welcome to the Windows CE Telnet Service on WM_eitan
Pocket CMD v 5.01".

Eitan